


PRO-GARD PRODUCTS, LLC
4B7M
2004-2008 FORD EXPLORER
5 PASSENGER ONLY
BARRIER INSTALLATION INSTRUCTIONS




I. Check to insure the following parts are included in your package:

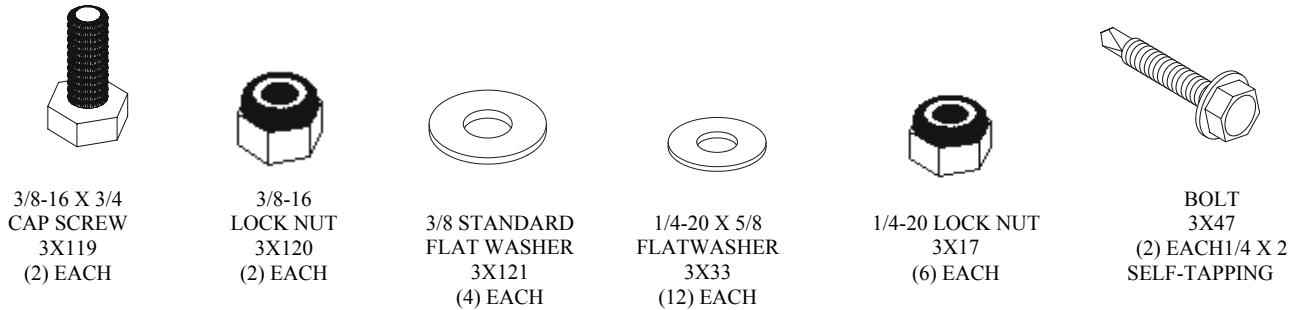

You'll need these tools:

II. 7/16" or 11mm Wrench and Socket

- A. 3/4" Inch Wrench and Socket
- B. Philips head screw driver (for attaching wings)

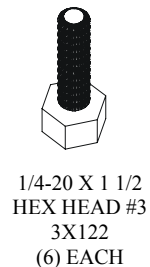

III. Read all instructions carefully before starting assembly.

1. Fold the second row seats down in order to access the rear of the vehicle.
2. The barrier can be put into the vehicle from the rear of the vehicle.
Orient the barrier so that the felt on each corner is toward the top of the vehicle.
Position the barrier so that when it is in an upright position, the window cut-out faces the front of the vehicle. See photo 1
3. Place one 3P101 bracket onto the inside wall of each barrier nearest to the top of the barrier. Next, install one 3P103 bracket consistent with the previous bracket. (Note:

that the angled end should be towards the rear, pointed outward, and placed behind the vehicle storage hooks). See photo 2

4. Place support bracket (3P104) in front of angled bracket previously installed. The vehicle storage hooks should be between the two brackets at this point. Align the holes and complete installation.
5. Finally, using the existing holes on the front sides of the barrier as a guide, mark and drill matching holes through the wings and install using existing hardware, (philip head screws).

Optional: Use the existing pair of holes located along the base of the barrier to install the 3x47 self-tapping bolts for additional support.

Caution: Before using self-tapping bolts, verify that there are no wiring harnesses, fuel or brake lines in the way. Tighten all bolts and hardware at this time.



Photo 1

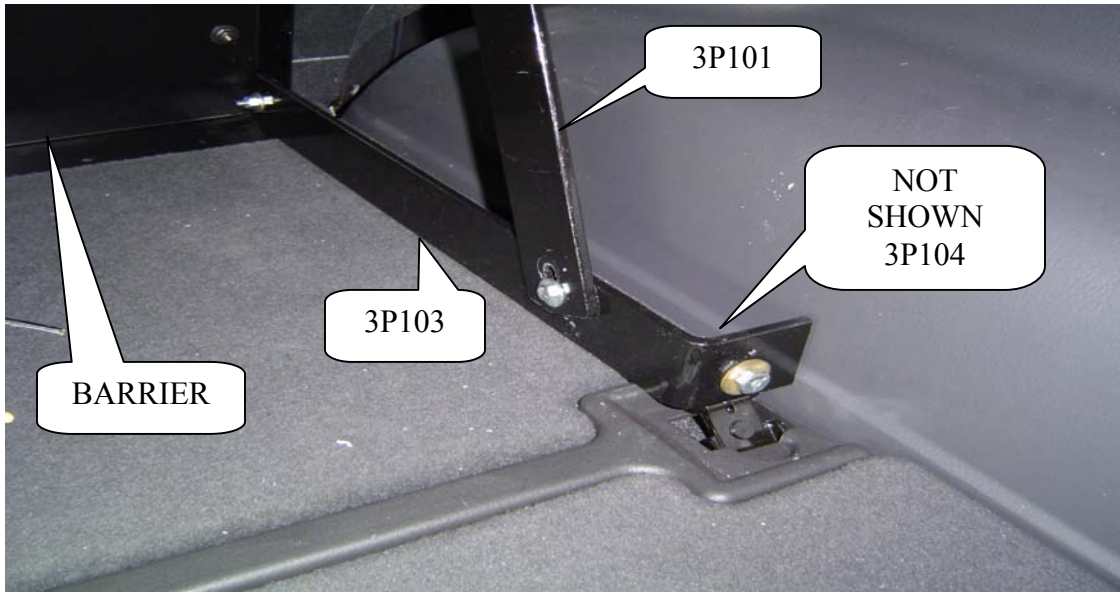


Photo 2



IF THERE ARE ANY QUESTIONS OR CONCERNS PLEASE CONTACT:

PRO-GARD PRODUCTS, LLC.
PHONE: 317-579-6680
FAX: 317-579-6681