

PRO-GARD PRODUCTS, LLC
2008 FORD EXPEDITION
PARTITION (4K58EXPD)
INSTALLATION INSTRUCTIONS




NOTE: Carefully review the parts contents list below and familiarize yourself with these parts. If there are any missing components, call (317) 579-6680 and ask for “Customer Service”, or circle the missing part on this sheet and FAX it to:

“PRO-GARD CUSTOMER SERVICE”
@ (317) 579-6681

I. Read all instructions before beginning installation!

II. PARTS LIST:

- (2) 3K5801 Bracket, Front B-Pillar
- (2) 3K5802 Bracket, Rear B-Pillar
- (1) 3K5803D Mount, Lower Partition- Driver
- (1) 3K5803P Mount, Lower Partition- Passenger
- (34) 3X16Z 1/4-20 Whiz Washer HD Hex Nut
- (28) 3X36 1/4-20 X 5/8,GR5, Carriage Bolts
- (6) 3X61 1/4-20 X 3/4, GR5, Carriage Bolts
- (1) 3P8106 Seat Protector, Full Width

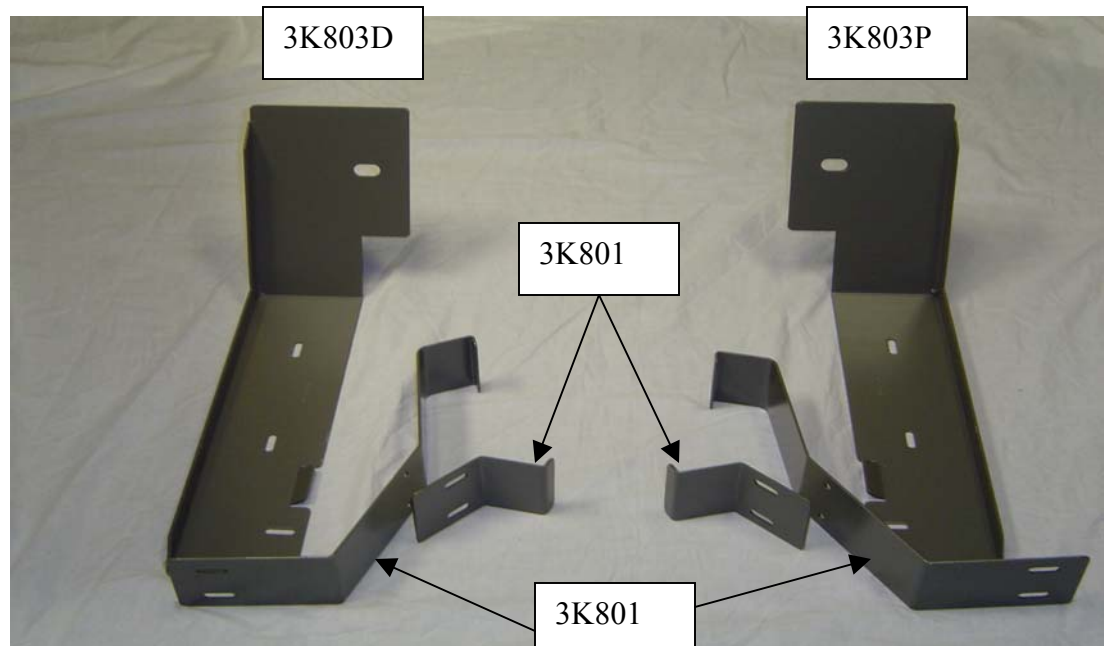

III. Installing the partition

- A. Remove the outer plastic seat bolt covers. This will allow access to the outer seat bolts.
- B. Remove the outer seat bolts, front and rear.
- C. Once the OEM seat bolts have been removed, insert the lower mounting brackets under the rear of the seat. Complete this process on the opposite side of the vehicle. **See fig. 1 & 2**
- D. Loosely secure the brackets before proceeding with any other installations. These brackets will support the weight of the partition



Fig. 1

Fig. 2



- E. With both lower mounting brackets installed and secure, install the partition using the lower and upper brackets. Rest the partition on the tabs of each lower mounting bracket. **See fig 2**
- F. Align the bolts holes of the partition with the slots of the mounting brackets, and secure using the (3X36) Carriage bolts and the (3X16Z) Whiz nuts.
- G. Mount the top of the partition using the (3K5801) front B-pillar brackets and the (3K5802) rear B-pillar brackets and secure using the (3X36) bolts and the (3X16Z) nuts.
- H. Be sure to install the front B-pillar bracket behind the OEM seat belts. This will allow the seat belts to run freely. **See fig. 3**



Fig. 3

IV. Installing the Seat Protector and Wings

- A. Mount the full width seat protector (3P8106) using the existing holes along the bottom of the partition. Secure with the (3X36) carriage bolts and the whiz nuts. **See fig. 4**
- B. Align the upper driver and passenger wings (3W58A) and lower driver and passenger wings (3W58B) with the existing holes of the partition. Be sure to place the top wings on the inside of the OEM support handle. Mount using the carriage bolts and the whiz nuts. Use the (3X61) carriage bolts when mounting the lower wings.



Fig. 4

IF THERE ARE ANY QUESTIONS OR CONCERNS PLEASE CONTACT:

PRO-GARD PRODUCTS, LLC

Phone: 317-579-6680

Fax: 317-579-6681