

INSTALLATION GUIDE

ABS DOOR PANEL


07-09 TAHOE

Pro-gard[™]
PRODUCTS LLC.


STRONG | RELIABLE | SECURE

pro-gard.com
800.480.6680

THESE COMPONENTS ARE REQUIRED
TO INSTALL THE PRO-GARD ABS DOOR PANEL

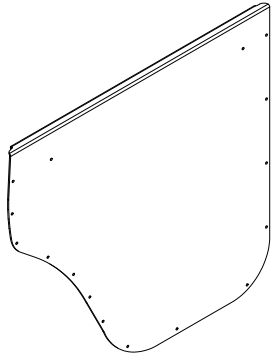

ABS DOOR PANEL

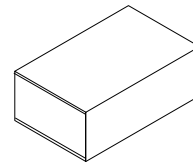

HARDWARE KIT

- I. Refer to the diagram on the last page of these instructions to verify all parts were received.
- II. The following tools will be required to complete the installation.
 1. Small pocket screwdriver
 2. 10mm nut driver or socket wrench
 3. Plastic fastener removal tool or large standard screwdriver
 4. Drill with Philips driver and 1/8" drill bit
- III. OEM Door Panel Removal
 1. Find the recess/keeper in the vertical face of the manual door lock knob, use a small screwdriver to pop the keeper out. The manual lock knob can now be removed.
 2. Find the cover plates behind both door handles, use a small screwdriver to remove.
 3. Remove the 6mm bolts from behind each using a 10mm nut driver.
 4. Starting at the bottom, locate and pry the plastic fasteners loose to remove OEM door panel from the door assembly.
 5. Disconnect the door latch cable from the door handle assembly.
 6. Remove the power window switch from the door panel.
 7. Remove the sound/moisture barrier from the inside of the door panel for reinstallation later.
 8. Secure the door latch cable to the door frame so it will not rattle.
 9. Make sure the power window switch is connected to the harness, protect it from moisture and secure the harness inside the door frame away from the window travel.
 10. Remove the manual door lock rod from its mount and remove.
 11. Reinstall the sound/moisture barrier on the inside face of the door.

IV. ABS Door Panel Installation

1. The ABS Door Panel will hang on the weatherstrip along the bottom of the window.
2. Be sure it pushed all the way down into the weatherstripping.
3. Slide the ABS door panel front to back for best alignment.
4. Attach with #8 x 5/8 self tapping screws.
5. Drill a 1/8" diameter hole if screw will not penetrate the inner door skin.

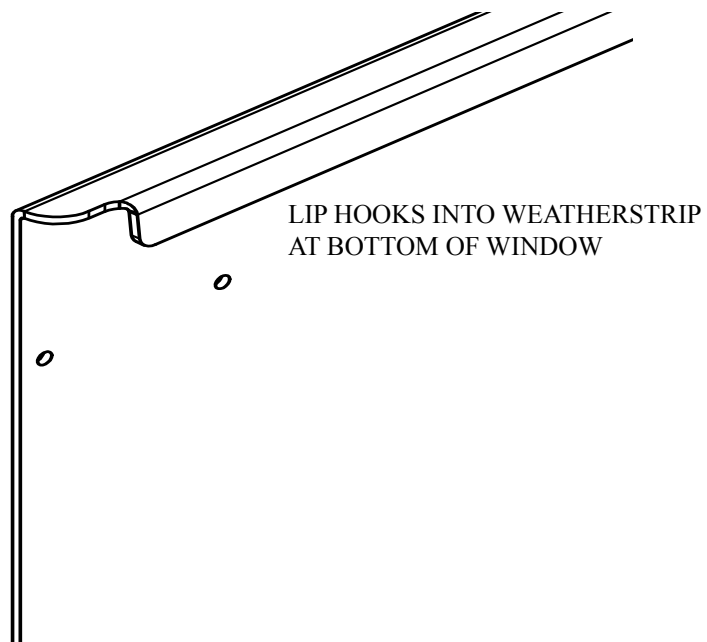


FIG. 1