

**INSTALLATION INSTRUCTIONS  
G7152 AND G7252 SERIES  
VERTICAL GUN RACKS FOR '06-'08 IMPALA**



**NOTE:** Carefully review the parts contents list below and familiarize yourself with these parts. If there are any missing components, call (317) 579-6680 and ask for “Customer Service”, or circle the missing part on this sheet and FAX it to:

**“PRO-GARD CUSTOMER SERVICE”  
@ (317) 579-6681**

This instruction sheet is for Impala Police Cruiser applications only.



**G7252 VERTICAL GUN RACK WITH MOUNT**

**TOOLS REQUIRED:**

Socket wrench with 15 MM socket and extension  
Drill driver with adapter and 3/8" socket  
Phillips head screwdriver

Read all instructions carefully before beginning installation.

**HARDWARE:**

3X125  
#14 x 2 SELF-DRILLING  
SCREW  
3 REQ'D



**INSTALLATION:**



PHOTO 1



PHOTO 2

1. Start by moving the front bucket seats all the way forward and up if equipped with power seats. (Although not absolutely necessary, this installation may be made easier by removing the lower rear seat cushion. Simply pull the two t-handle releases at the front and lift upward.)
2. Remove the factory supplied Cup Holder (See Photo #1) from the rear of the console area by removing the four screws attaching it to the top of the “Crush Box”. (See Photo #2) The Crush Box bridges the center hump at the rear of the bucket seats and should never for any reason be permanently removed from the vehicle.
3. Find the four hex washer head bolts (two on each side of the hump) securing the Crush Box to the floor pan. Access these over the top of the inner seat slide assemblies with a socket and extension. Loosen the front two and remove the back two bolts. This will allow the rear of the Crush Box to be pivoted up.

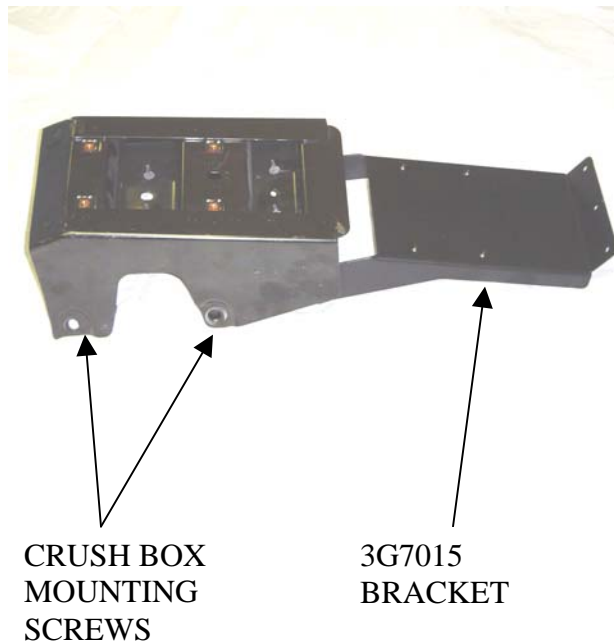


PHOTO 3


4. Slide the arms of the 3G7015 Mounting Bracket under the rear of the Crush Box until the holes in the arms align with rear holes in the Crush Box. (See Photo #3) It may help to raise the rear of Mounting Bracket initially. Reinstall the two bolts removed from the rear of the Crush Box, making sure not to cross-thread. Leave loose at this time.
5. Allow the rear of the Mounting Bracket to pivot down toward the top of the hump until level and pull it back toward the rear seat. Use the three 3X125 self-drilling screws provided to secure the rear of the Mounting Bracket to the floor pan of the vehicle just below the front of the lower seat cushion.
6. Tighten the four Crush Box bolts.



PHOTO #4

7. To reinstall the O.E.M. cup holder two slots will need to be cut (See Photo #4) to allow it to fit around the 3G7015 mounting bracket. Make these cuts and reinstall the cup holder.
8. The 7000 Series Gun Rack Frame can now be placed on top of the Mounting Bracket. Put the Butt Plate screws through the butt plate, through the slots in the gun rack frame and thread them into the four threaded inserts in the Mounting Bracket. Place the weapons into the gun rack and adjust the gun rack frame assembly front-to-back to achieve the proper location relative to the gun lock. Remove the weapons and tighten the butt plate screws. Install the rubber butt pads.
9. The plastic back can now be removed from the gun rack to make the proper electrical connections. Refer to the typical wiring diagram provided.
10. Check the complete installation for best fit and function. Tighten all fasteners at this time.
11. Reattach the gun rack back. Installation is complete.

INSTALLATION INSTRUCTIONS  
 MODEL G1002  
 OPTIONAL 8 SECOND TIMER  
 3-WIRE

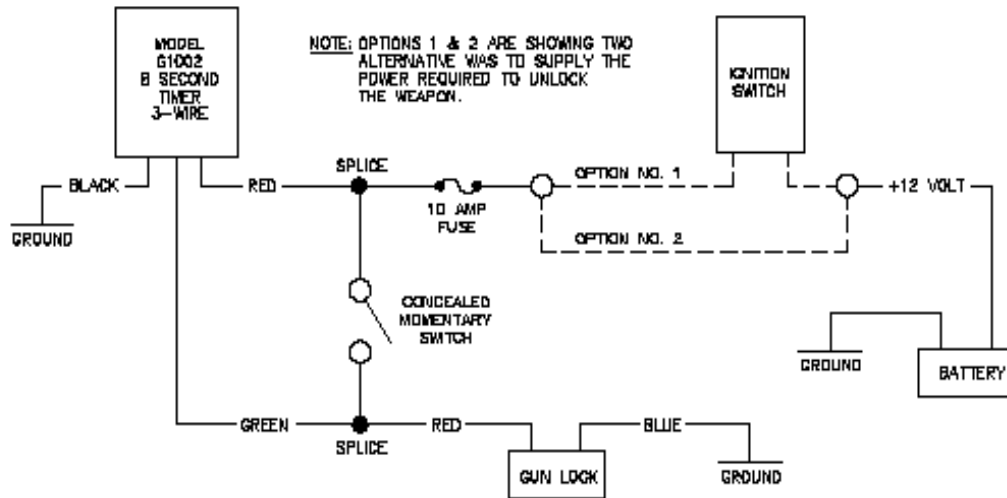

[IF THERE ARE ANY QUESTIONS OR CONCERNS PLEASE CONTACT:](#)

PRO-GARD PRODUCTS, LLC

Phone: 317-579-6680

Fax: 317-579-6681