


S56C06 & FP5606
INSTALLATION INSTRUCTIONS
2006-2007 DODGE CHARGER
FLOOR PAN & SEAT INSTALL




- **BE SURE TO CAREFULLY REVIEW ALL INSTRUCTIONS BEFORE INSTALLATION.**
- **BEFORE DRILLING HOLES INTO THE VEHICLE, BE SURE TO LOCATE ANY BRAKE LINES, FUEL LINES, OR ANY OBJECT THAT MAY BE IN THE WAY**
- **PARTITION IS DESIGNED TO BE USED IN '06-'07 DODGE POLICE CHARGER ONLY**

NOTE: Carefully review the parts list below. If there are any missing parts, please call (317)-579-6680 and ask for "Customer Service" or circle the missing part on this sheet and fax to (317) 579-6681. Be sure to locate important vehicle components: wires, fuel lines, brake lines, etc., before drilling holes

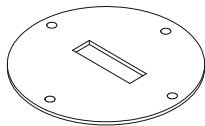

**Cover Plate
(Puck) 4S6000C
(2) Each**

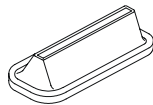

**Grommet
3S5001
(2) Each**



**#8 5/8" Phillips Head
Truss
3X72
(4) Each**




**#10 1 1/2" Oval Phillips Head
Self-Tapping Screw
3X77
(9)**



**#10 Finish Washer
3X78
(9)**



**Seat Location Tab
3S5601
(2) Each**

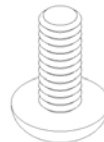

**1/4"-20 X 5/8"
Phillips Head Truss
(4) Each**



**1/4"-20 ESNA Nylon
Locknut
3X17
(4) Each**

I. Removing the OEM seat

A. Begin by lifting the rear seat bottom out from the seat hooks (See fig. 1). Remove the seat belts by removing the OEM nuts from the vehicle seat belt mounting studs using a 18mm socket/wrench (See fig. 1A). Do not remove the seat belts anchored to the sides of the vehicle (shoulder straps).

B. Remove the backrest OEM seat by pressing on the top of the tabs located on either side of the seat behind the headrests. A screwdriver can be used to accomplish this unlocking of the tabs. (See fig. 2 & 3)


C. At this point the vehicle should resemble (Fig. 4). The seats have been removed and only the OEM child

restraints are exposed. Note that some of the child restraint bars have been bent toward the floor. This is necessary for the Pro-gard seat to fit properly in position. Simply press firmly onto these bars until they resemble the photo #4.

D. Make sure that the seat brackets (3P214) are installed as shown in the photo to the right. This will help align the Center Divider.



Fig. 1

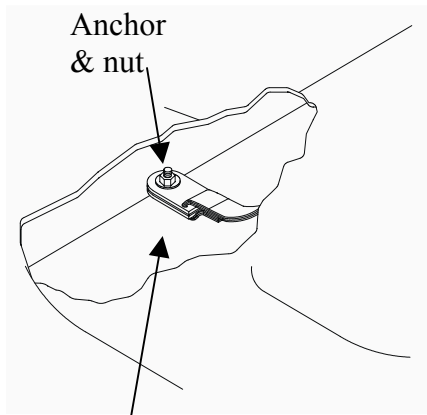

Seatbelt



Fig. 2



Fig. 3



Fig. 4

II. Installing the Pro-gard ABS floor pan

A. Before installing the floor pan, lift the plastic B-pillar cover by removing the Phillips screw. Also, lift the C-pillar plastic cover toward the rear of the vehicle. This is to be done on both sides before installing the floor pan.

B. Next, install the floor pan making sure that there are no objects underneath. Note: the rear of the pan does not cover the OEM seat inserts (See fig. 5 & 6).

- C. Using the existing holes in the floor pan as a template, drill a 1 ½” hole in each side of the floor and insert the rubber grommets. This will allow for cleaning and drainage. The plastic trims can now be re-mounted.

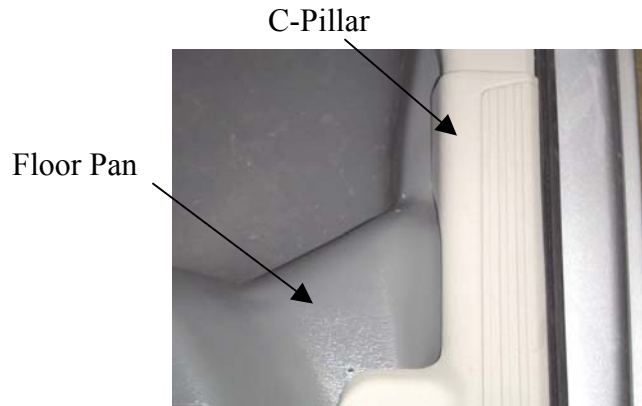


Fig. 5



Fig. 6

III. Installing the Pro-gard ABS rear seat

- A. Before installing the Pro-gard seat, mount the seat locating tabs (3S5601) from the bottom of the ABS seat using the (3X03) carriage bolts and the 3X17 lock nuts. These locating tabs will allow the seat location into the OEM seat insert (**refer to fig. 6 above & fig. 7 below**). The seat will position over the edge of the floor pan.
- B. Re-install the seat belts using the OEM mounting nuts. The OEM seat belts will be used with the Pro-gard seat.
- C. Once the seat has been positioned from the bottom, complete the seat installation by using the self-tapping screws provided, (3X77) and the (3X78) finish washers to secure into place (**See fig. 8**). These screws will also be used to secure the seat along the floor pan area, see existing holes. Note that the seat has a seat belt relief along each side of the seat. This will allow for seat belt adjustments (**See fig. 9**).



Fig. 7



Fig. 8



Fig. 9

IV. Installing the seatbelt cover plates

- A. After installing the floor pan and seat, pull the seatbelts through the large holes on the seat.
- B. Be sure to insert the rubber grommet into the slots of the cover plates. Insert the seatbelts through the cover plate and grommet before mounting to the seat (**See figs. 10 & 11**). Secure using the (3X72) Phillips head truss screw.

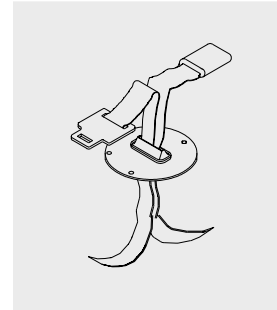


Fig. 10

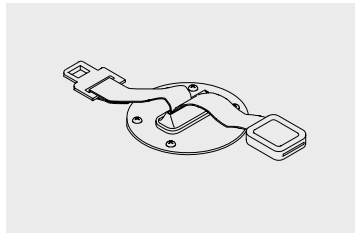


Fig. 11

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE CONTACT

PRO-GARD PRODUCTS, LLC
PHONE: 317-579-6680


P1000C06
INSTALLATION INSTRUCTIONS
2006-2007 DODGE CHARGER
PRO-CELL PARTITION INSTALL



- **BE SURE TO CAREFULLY REVIEW ALL INSTRUCTIONS BEFORE INSTALLATION.**
- **BEFORE DRILLING HOLES INTO THE VEHICLE, BE SURE TO LOCATE ANY BRAKE LINES, FUEL LINES, OR ANY OBJECT THAT MAY BE IN THE WAY**
- **NOT COMPATIBLE WITH SIDE CURTAIN AIRBAGS**
- **PARTITION IS DESIGNED TO BE USED IN '06-'07 DODGE CHARGER POLICE VEHICLE ONLY**

NOTE: Carefully review the parts list below. If there are any missing parts, please call (317)-579-6680 and ask for "Customer Service" or circle the missing part on this sheet and fax to (317) 579-6681. Be sure to locate important vehicle components: wires, fuel lines, brake lines, etc., before drilling holes



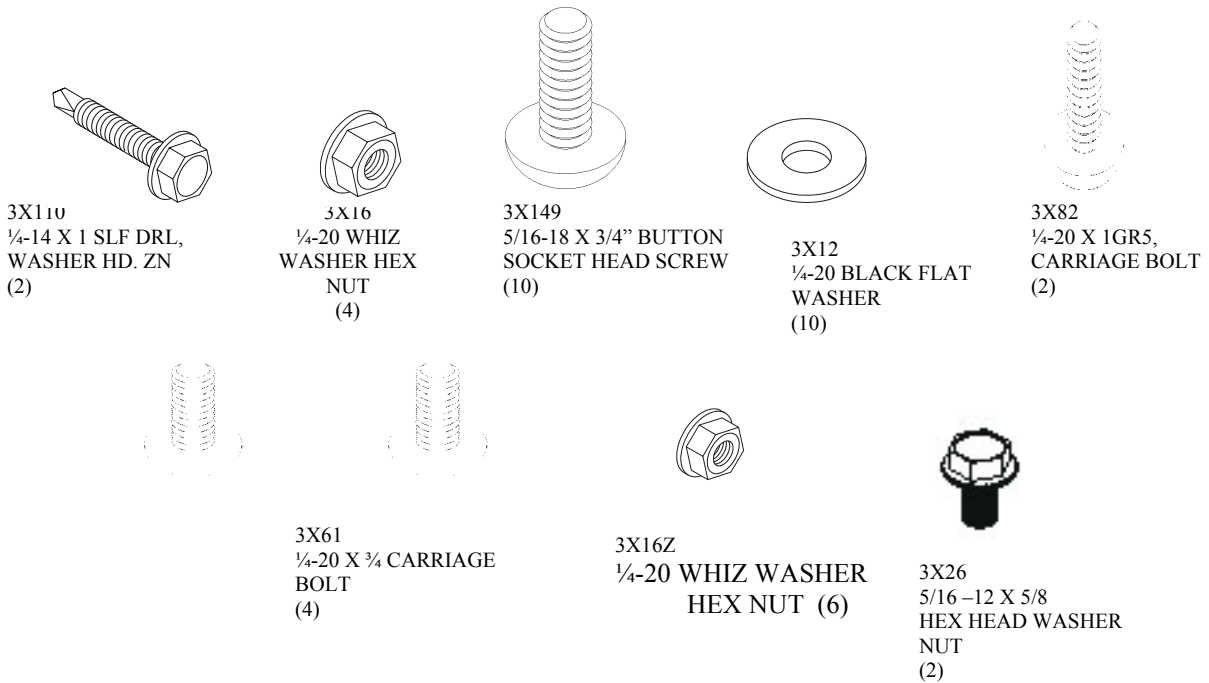

Note: Read all instructions carefully before installing the partition.

Suggested tools:

1" Hole saw

Drill w/ 3/8" socket




3K5037
BRACKET

I. B-Pillar Bracket Installation

- A. Begin by removing the B-pillar section. **(Fig. 1)** This will be reinstalled after drilling holes into the cover. Cut the template where indicated and align with the seat belt relief **(Figs. 2)**. Remove the sound insulation located inside the B-pillar cover. This will make it easier to for drilling the 1" holes through the cover. Using the template circles as a guide, drill the holes. **(Fig. 3)**



Fig. 1

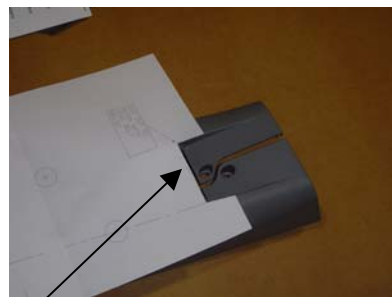

Figs. 2



Figs. 3



Fig. 4

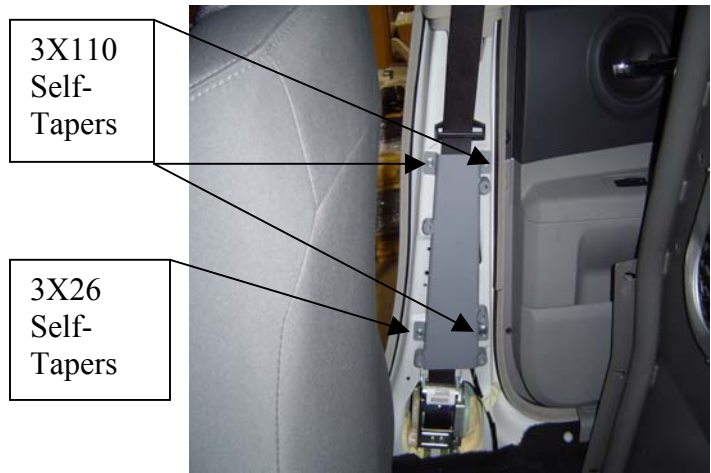


Fig. 5

- B. Install the B-pillar bracket (3K5011 passenger). Using the bracket side hooks as guides, insert the bracket into the OEM vertical slots in the b-pillar frame (**fig. 4**). Once you have inserted the bracket into position, locate the lower OEM B-pillar hole and insert the 3X26 self-taper. Locate the other three tabs and secure it with four of the 3X110 self-drilling screws (**fig. 5**). Duplicate the above directions for the opposite side. You can now reinstall the b-pillar covers. See the following photo (**fig. 6**).



Fig.6



Fig. 7



Fig. 8



Fig. 9

II. Partition Installation

First, make sure that the OEM console is removed. Install the 3K5037 Center Hump Mounting bracket using the OEM self-taped holes used to mount the plastic rear vent.


- A. Mount the (3K5013 passenger), to the lower studs protruding through the b-pillar cover (fig.7). **Mount the bolt to the rear of the vehicle first. (See fig. 7).** This will help support the partition while installing.
- B. You can now insert the partition into the vehicle. Due to the weight and size of the partition, assistance from another party is highly recommended. Insert the partition tubes onto the tubes of the brackets you just installed **(See fig. 8)**. Now, you can easily lift and position the partition so that the other bolt can be inserted into the stud toward the front of the vehicle. Once the partition is set into position, install the mounting plate (3K5014 driver & 3K5015 passenger), using the 3X149 button head bolts and 3X12 flat washers. To mount the partition to the rear of the plate, use the 3X02 Phillips head bolts and the 3X16 black whiz nuts. **(See fig. 9)**
- C. Do not tighten the bolts until the center divider has been inserted. This will allow for adjustments and proper fit.

**Center Divider
3P5606**

III.Center Divider Installation

- A. Insert the center divider from the passenger side of the vehicle. Be sure to start with the tail of the divider, aimed toward the rear window and speaker deck area. Once you have inserted the divider, press the divider against the seat mount brackets, and then to the partition tabs **(See fig. 10)**. **The holes for the center divider are not provided.**

Fig.10

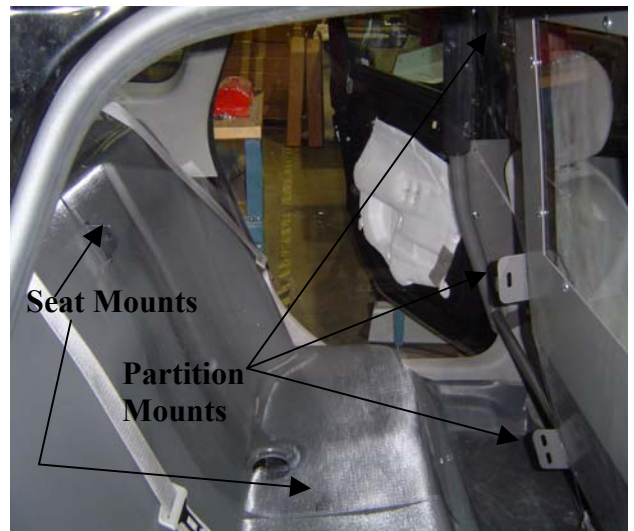



Note: Mount the 5606-center divider to the partition-mounting hump bracket using the 3X61 bolts and 3X16Z whiz nuts. Secure the bottom using the 3X82 carriage bolts and the 3X16Z nuts.

- B. Once you've installed the divider, mount the divider deck bracket in place. Slide the T-bracket under the divider tail. Position the T-bracket where desired and use the (3X110) self-tapping screws to fasten the bracket into the speaker deck (See fig. 11).
- D. Use the existing holes and slots on the bracket as a template, and drill holes to secure each area using the 3X61 carriage bolts and the 3X16Z whiz nuts.

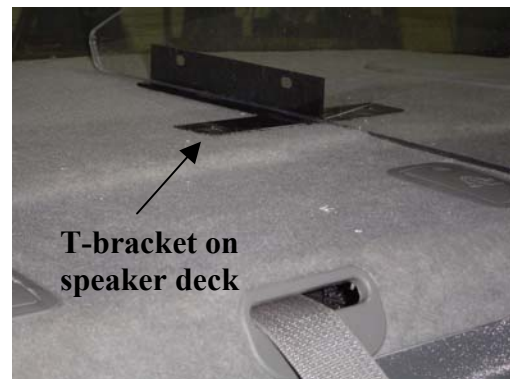


Fig.11



Fig.12

- E. Assemble vent plate over 3 large diameter air holes. Use (black ABS) spacers between plate and center divider. Secure using the long, Philips head screws, black whiz nuts, and black caps. (See fig. 12)

IV. Wing Installation

You are now ready to install the side panel wing. Using the existing 3 holes provided in the top corners of the partition, mount the wings (4W56P passenger) using the 3X61 carriage bolts and the 3X16Z whiz nuts. (Fig.13)

Extra Component

Component available for the '06 Charger partition:

SP56BS06 Bucket Seat Protector



Fig.13

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE CONTACT

PRO-GARD PRODUCTS, LLC

PHONE: 317-579-6680