

PRO-GARD PRODUCTS, LLC
2007-2008 TT56C06
CHARGER TRUNK TRAY
INSTALLATION INSTRUCTIONS



NOTE: Carefully review the parts contents list below and familiarize yourself with these parts. If there are any missing components, call (317) 579-6680 and ask for “Customer Service”, or circle the missing part on this sheet and FAX it to:

“PRO-GARD CUSTOMER SERVICE”
@ (317) 579-6681

Read all instructions before beginning installation!

Note: Trunk Tray will not work with optional full-size spare tire mounting assembly.

The tire mount system should be removed.

PARTS LIST:

Trunk Tray – 1 EA.
Slide Rails – 1 left & 1 right
Offset C-Shaped Brackets (3T5603) – 2 EA.
Front Mounting Brackets (3T5602D & 3T5603P) – 1 EA.
Rear Mounting Brackets (3T5601D & 3T5601P) – 1 EA.
Tray Mounting Clips (3T5604) 2 – EA.
Tray support bracket – 1 EA.
(3X110) #14 X 1 Self-Drilling Screw – 4 EA.
(3X16) ¼-20 Whiz Nut - 24 EA.
(3X02) ¼-20-½ Phillips Head Bolt – 24 EA.
(3x40) #10-32 Hex Nut – 2 EA
(3X11) #10-32 Pan Head Machine Screw – 2 EA.
(3X144) 5/16 X ¾ Carriage Bolt – 4 EA.
(3x55) 5/16 –18 Hex Nut, Zinc – 4 EA.
(3X33) ¼” Flat Washer – 2 EA.
(3X26) 5/16-14 x ¾ self-threading screw – 2 EA.

1. Inventory parts using Photos 1 and 2.

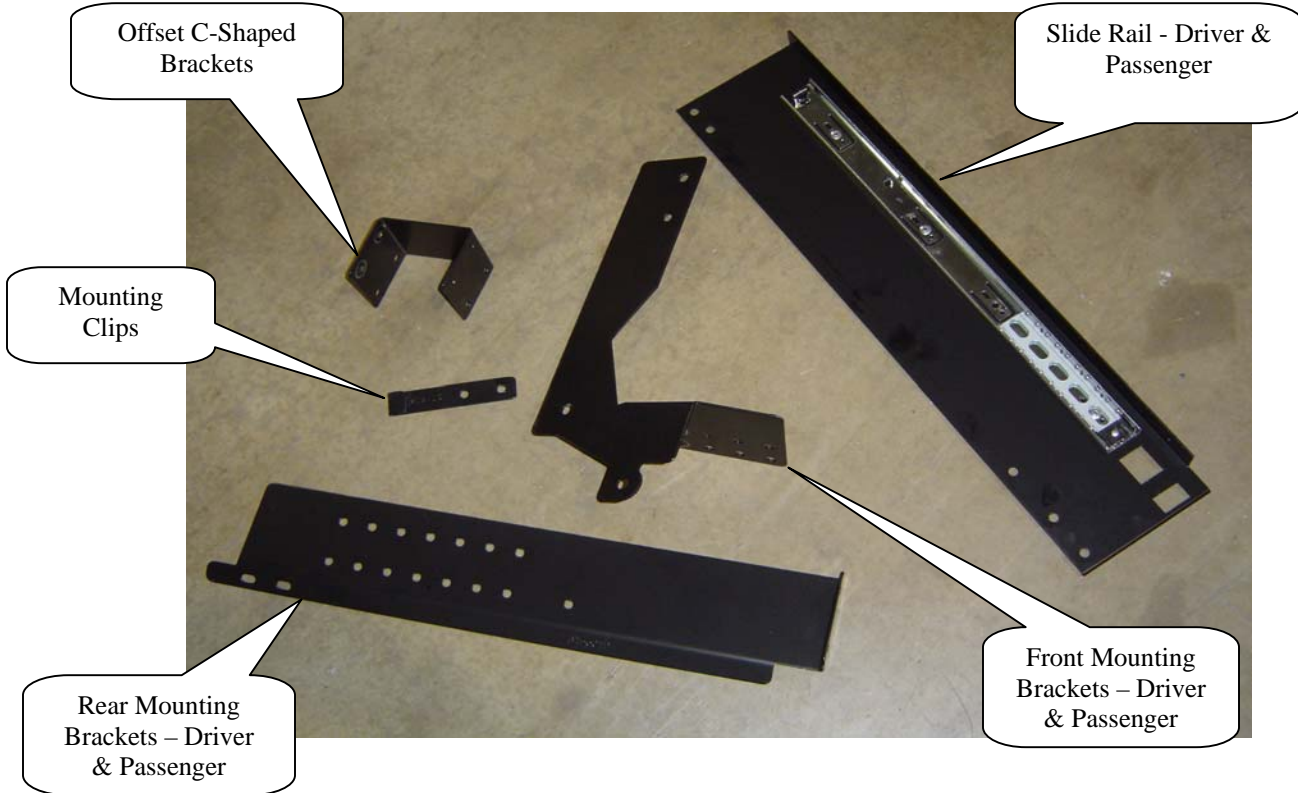


Photo 1



Photo 2

2. The vehicle's rear seat must be removed before beginning the installation. Once this has been done, remove the two OEM plastic fasteners located on the seat-mounting surface that secure the carpet-like material.
3. Lift the carpet material of the rear seat-mounting surface and install the front mounting bracket (3T5602 D&P) on both driver and passenger sides of the vehicle. Note: the bracket tab will be mounted using the existing hole locations. No holes need to be drilled. (See photos 3 & 4). **Tighten fasteners.**

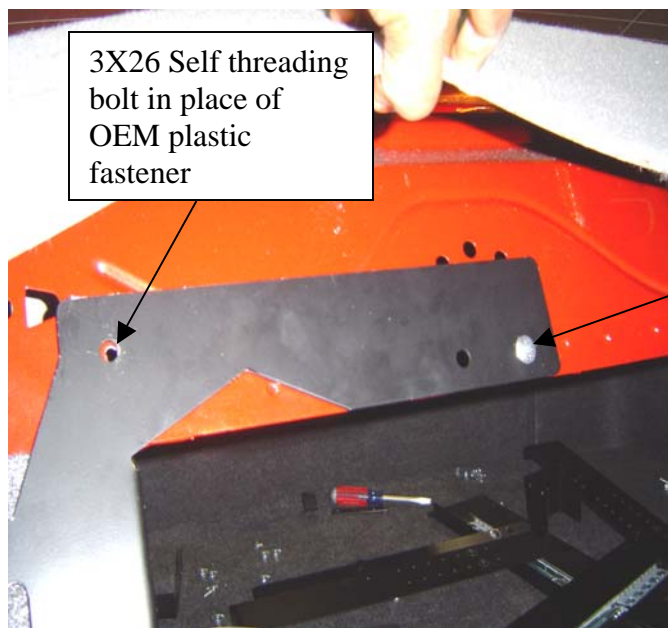


Photo 3

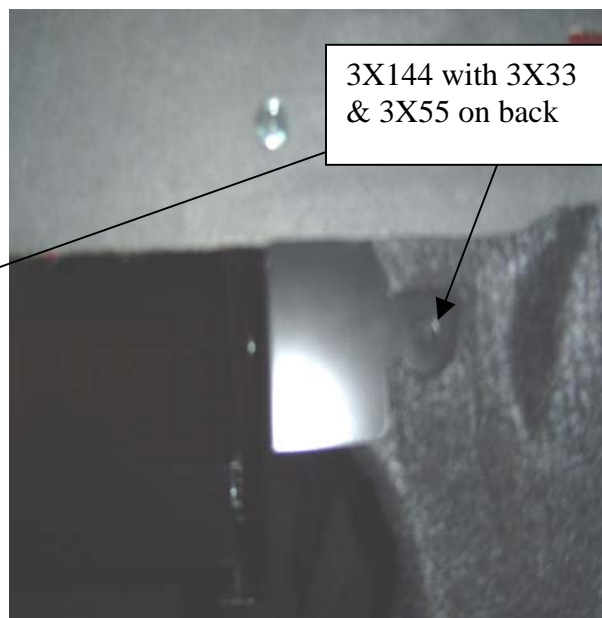


Photo 4

4. At the rear of the vehicle lift the rubber trunk seal in both front corners of the trunk opening to allow the mounting clips (3T5604) to be placed on both sides. (See photo5) Do not replace the trunk rubber seal at this time. The bracket will need to be adjusted later.



Photo 5

5. Do not replace the trunk rubber seal at this time. The bracket may need to be adjusted.
6. To install the rear mounting brackets, position the brackets by lifting the spare tire cover and placing the bottom 2 hole flange of the bracket on the rim of the spare tire well. (See photo 6 & 7) Allow spare tire cover to close to hold the rear brackets in place for further assembly. Do not secure to the wheel well rim at this time.

Leave all fasteners loose until all components are assembled.

7. Attach the top portion of the rear bracket to the tray clip that was positioned underneath the rubber seal. Refer to note #4 and photo 5 above.
8. Next, attach the offset C-shaped brackets to the rear mounting bracket in the **highest location** to will allow the tray assembly to be inserted later. Attach the front of the slide rails (See photo 8) to front mounting brackets installed in Step #3 with one bolt at each side. This will allow the slide assembly to pivot for alignment with C-shaped brackets attached to the rear bracket assembly..



Photo 6




Photo 7



Photo 8

9. Attach the angle strut, open side down, at the rear of the slide rails using the (3X40) pan head bolts and nuts provided. Install bolts from the top. Leave loose.
10. Insert the Trunk Tray slides into the slide rails and check slide operation.
11. Tighten the 3X40 bolts. Determine the desired installation height for the tray/slide assembly. Remove mounting bolts at both front and rear and relocate tray to height desired.

12. Tighten all fasteners and secure rear brackets to rim of spare tire well with 3X110 self-drilling screws provided. (See following photos)
13. Replace the rubber trunk seal and rear seat. Installation is complete.

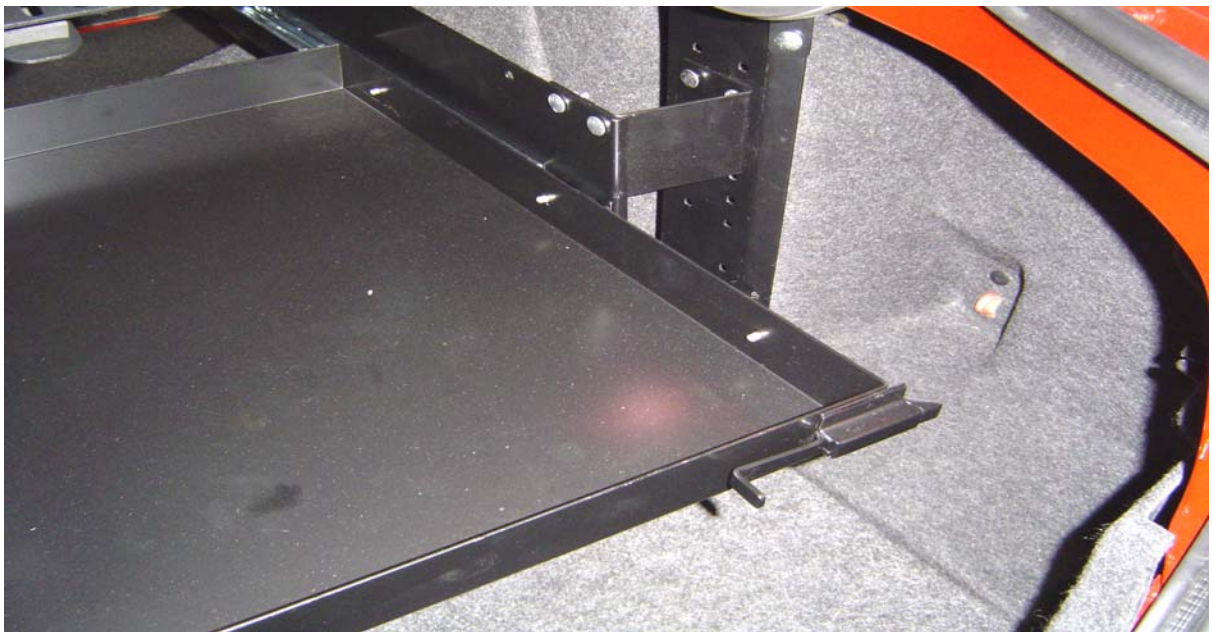

PRO-GARD PRODUCTS, LLC
Phone: 317-579-6680
Fax: 317-579-6681