

**W56C06**  
**PARTITION WING (MODIFIED)**  
**INSTALLATION INSTRUCTIONS**  
**FOR 2008 DODGE CHARGER**




NOTE: Carefully review the components below and familiarize yourself with these parts. If there are any missing parts, call (317) 579-6680 and ask for "Customer Service", or circle the missing part on the sheet and fax it to:

"Pro-Gard Customer Service"  
@ (317) 579-6681

**NOT AIRBAG COMPATIBLE**

**Wing Installation**

1. Using the existing 3 holes provided in the top corners of the partition, mount the wings (4W56D driver and 4W56P passenger) using the 3X61 carriage bolts and the 3X16Z whiz nuts.

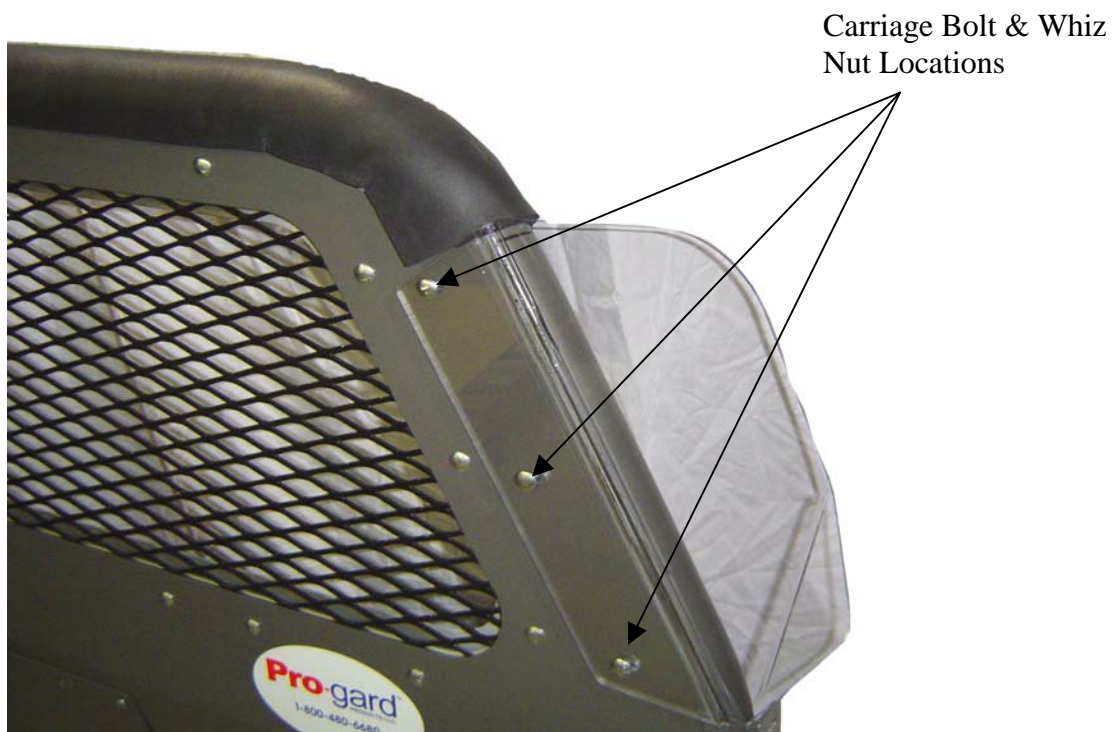

2. The hardware to mount the wings will be included in the hardware kit. See hardware below. **Note that the bolt heads are located on the back of the wings and the partition toward the seat area.**



1/4-20-WHIZ WASHER  
3X16Z  
(6) EACH



1/4-20X 1/2 CARRIAGE  
BOLT  
3X61  
(6) EACH

IF THERE ARE ANY QUESTIONS OR CONCERNS PLEASE CONTACT

PRO-GARD PRODUCTS, LLC  
PHONE: 317-579-6680